



Industrial Rubber Inc.

3609 S. High Oklahoma City, Oklahoma 73129
 Phone 405/632-9783 Fax 405/634-9637

Industrial Rubber, Inc. Stop Collar



Industrial Rubber's Stop Collars are used with Casing Centralizers, Baskets, Scratchers, Etc. to restrict movement up and down the casing.

Our most popular Stop Collar is the Latch-On Series 252 Friction Type show above.

Also available is IRI's Series 254 Slip-On with Integral Set Screws.

Stop Collar	
Size	Part Number
2 3/8"	252-0023
2 7/8"	252-0027
3 1/2"	252-0034
4 1/2"	252-0044
5 1/2"	252-0054
6 5/8"	252-0065
7"	252-0070
7 5/8"	252-0075
8 5/8"	252-0085
9 5/8"	252-0095
10 3/4"	252-0106
11 3/4"	252-0116
12 3/4"	252-0126
13 3/8"	252-0133
16"	252-0166
20"	252-0200
22"	252-0220
24"	252-0240